

# KENT-MOORE

*Heavy Duty Division*

## INSTRUCTIONS FOR PT 6040 INJECTOR PULLER

APPLICATION..... Cummins L-10 and NH Cylinder Injectors.


FUNCTION..... Provides positive grip on injector body for easy removal.

### INSTRUCTIONS

1. To remove injector, back off adjusting nut until puller jaws can be installed onto injector body and the jaws are positioned under injector nut or into undercut on injector body.
2. Tighten adjusting nut with slide hammer by engaging tangs into slot and rotating clockwise until jaws firmly grip injector. Rap slide hammer until injector is removed.
3. Back-off adjusting nut with slide hammer to remove injector from puller.

### CARE AND MAINTENANCE

Keep adjusting nut taper surface lubricated with extreme pressure lubricant.

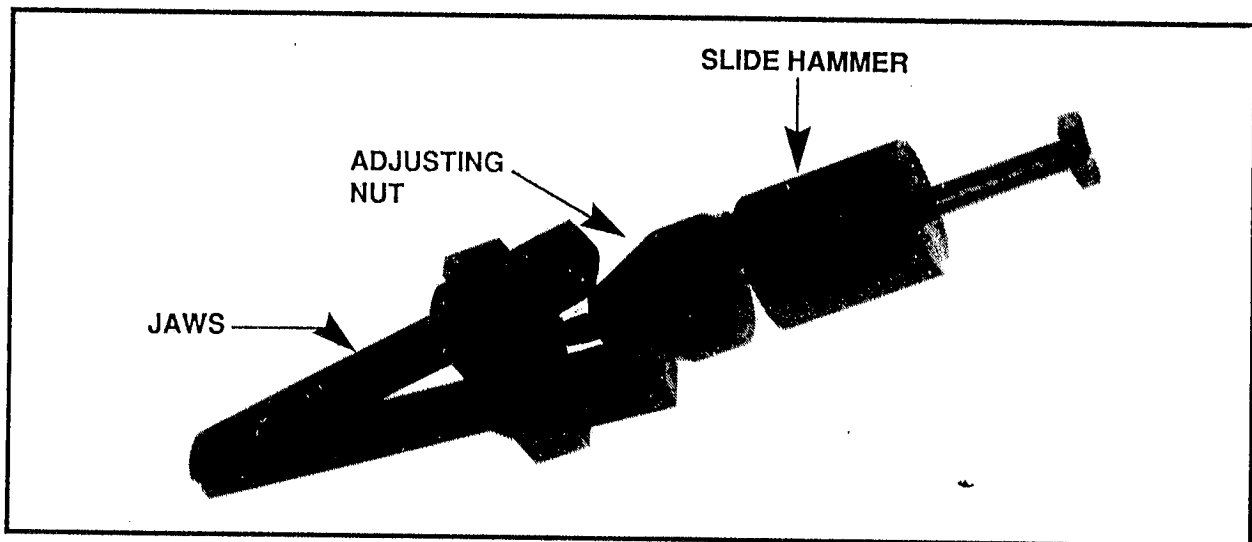

**SPX**

*Exponent of Excellence*

**KENT-MOORE**

*Kent-Moore  
Heavy Duty Division  
SPX Corporation*

*29784 Little Mack  
Roseville, MI 48066-2298*

*1-800-328-6657 (USA, Canada)  
Telex 244040 KMTR UR  
Fax 313-774-9870*