
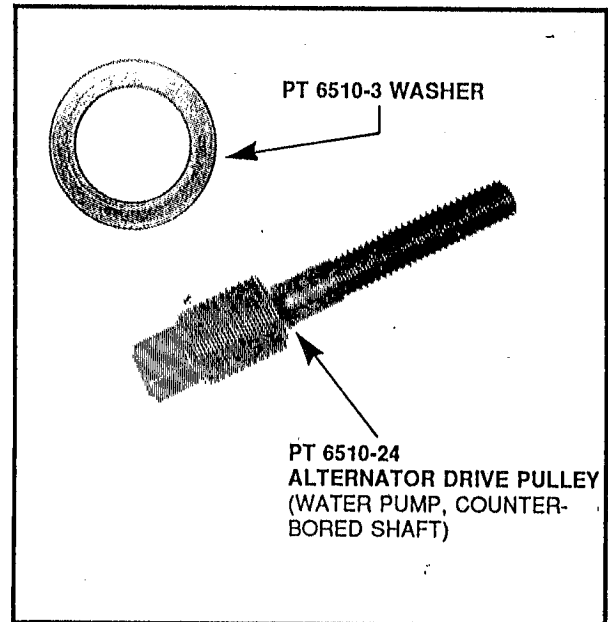


KENT-MOORE

PT 6510-20A WATER PUMP/ACCESSORY DRIVE PULLEY INSTALLER ADAPTERS

APPLICATION: CUMMINS L-10

Adapts PT 6510 Pulley/Installer to end of metric tapped shafts for easy pulley installation.

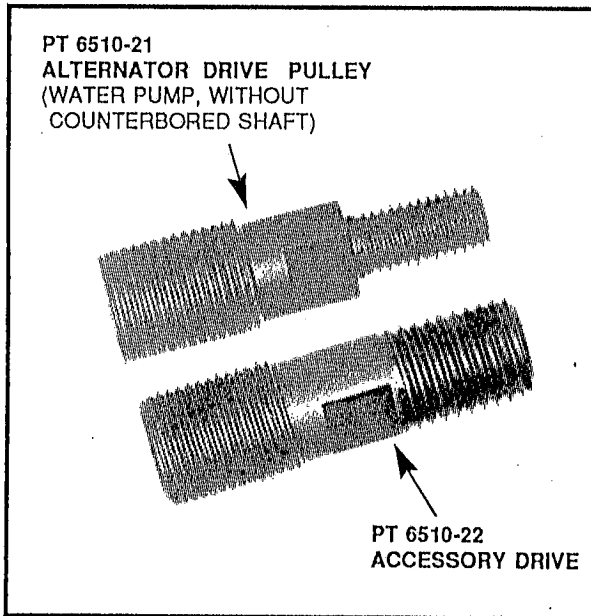

Pulley Installation

PT 6510-20A Adapter Kit is used with PT 6510 Installer.

1. Align the slot in the pulley with the dowel pin on the drive shaft.
2. Install adapter(s) thru pulley and into the end of driveshaft.
 - PT 6510-21 for alternator drive pulley (water pump, noncounterbored shaft)
 - PT 6510-24 for alternator drive pulley (water pump, counterbored shaft)
 - PT 6510-22 for accessory drive pulley
3. Secure PT 6510-1 main body to adapter. Assemble two PT 6510-3 thrust washers onto main body with hex.
4. Tighten hex nut until pulley bottoms on the drive shaft dowel pin.

SP^x

Exponent of Excellence

KENT-MOORE

Kent-Moore
Heavy Duty Division
SPX Corporation

29784 Little Mack
Roseville, MI 48066-2298

1-800-328-6657 (USA, Canada)
Telex 244040 KMTR UR
Fax 313-774-9870